


# MPPC® modules

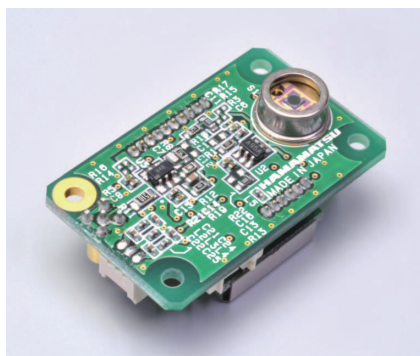

C14452 series

## Optical measurement modules for low-level light detection, analog output

The C14452 series are optical measurement modules capable of detecting low-level light using its built-in MPPC. These modules consist of an MPPC, an amplifier, a high-voltage power supply circuit, and a temperature compensation circuit. The photosensitive area is available in two sizes of  $\phi 1.5$  mm and  $\phi 3$  mm, and the signal output is analog. The modules operate just by connecting them to an external power supply ( $\pm 5$  V).

### Features

- Built-in MPPC for precision measurement (new product)
- High sensitivity in the short wavelength range
- Low noise equivalent power
- Built-in temperature compensation circuit
- Compact and lightweight
- Analog output

### Applications

- Flow cytometry
- Low-level light measurement
- Fluorescence measurement
- Analytical instrument

### Structure

Parameter	Symbol	C14452-1550GA	C14452-3050GA	Unit
Effective photosensitive area	-	$\phi 1.5$	$\phi 3$	mm
Pixel pitch	-	50		$\mu\text{m}$
Number of pixels	-	724	2836	-

### Absolute maximum ratings

Parameter	Symbol	Condition	Value	Unit
Supply voltage	Vs		$\pm 6$	V
Operating temperature	Topr	No dew condensation*1	-10 to +60	$^{\circ}\text{C}$
Storage temperature	Tstg	No dew condensation*1	-20 to +80	$^{\circ}\text{C}$

\*1: When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

### Electrical and optical characteristics (Ta=25 °C, $\lambda = \lambda_p$ , Vs= $\pm 5$ V, unless otherwise noted)


Parameter	Symbol	Condition	C14452-1550GA			C14452-3050GA			Unit
			Min.	Typ.	Max.	Min.	Typ.	Max.	
Spectral response range	$\lambda$		350 to 1000			350 to 1000			nm
Peak sensitivity wavelength	$\lambda_p$		-	600	-	-	600	-	nm
Temperature stability of output voltage	-	Ta=25 $\pm$ 10 $^{\circ}\text{C}$	-	-	$\pm 5$	-	-	$\pm 5$	%
Photoelectric conversion sensitivity	-		$0.7 \times 10^9$	$1.0 \times 10^9$	$1.3 \times 10^9$	$0.7 \times 10^9$	$1.0 \times 10^9$	$1.3 \times 10^9$	V/W
Cutoff frequency	High band	-3 dB, sine wave	1.4	2	-	1.4	2	-	MHz
	Low band		DC			DC			-
Rise time	tr	10% to 90%, 1p.e.	-	5	-	-	9	-	ns
Noise equivalent power	NEP	Dark state	-	1.3	2.6	-	3	6	fW/Hz <sup>1/2</sup>
Minimum detection limit	-	Dark state	-	2	4	-	4.3	8.6	pW rms
Maximum output voltage	-		-	4.7	-	-	4.7	-	V

**Electrical characteristics**

Parameter	Symbol	Condition	Min	Typ	Max	Unit
Supply voltage*2	+Vs		+4.75	+5	+5.25	V
	-Vs		-4.75	-5	-5.25	
Current consumption	Ic	+Vs	-	+50	+250	mA
		-Vs	-	-20	-40	

\*2: A power supply with 300 mA or higher output must be used.


**Block diagram**

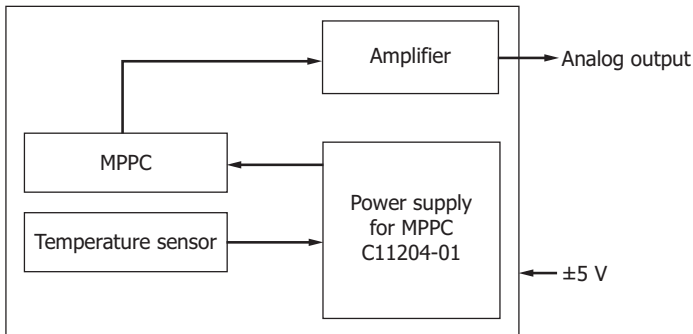

KACCC0675EA

**Connection example**


Using the supplied power cable, connect the MPPC module to a power supply. You can observe the MPPC module's output waveform by connecting the module to an oscilloscope.

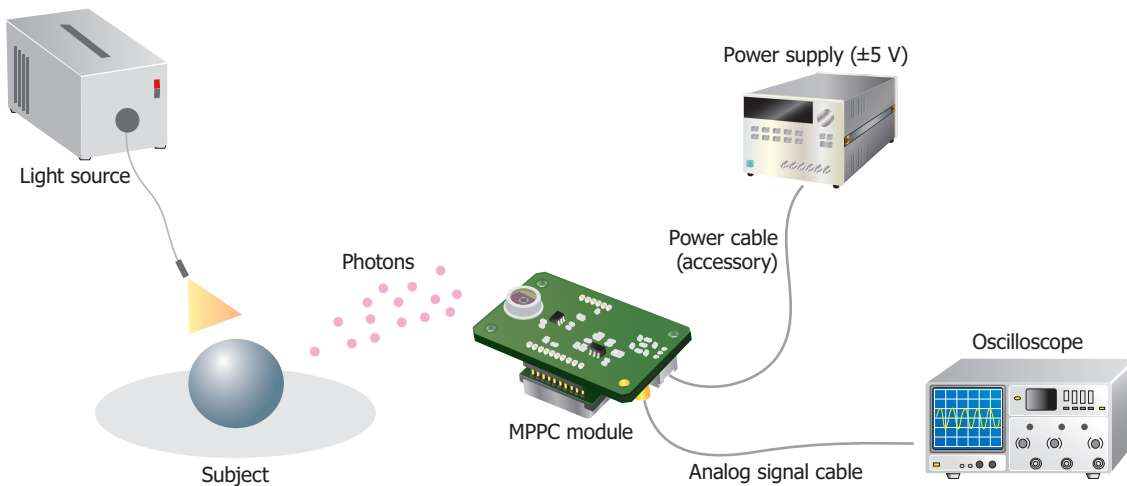


KACCC1001EA

**Measurement example**

Analog output

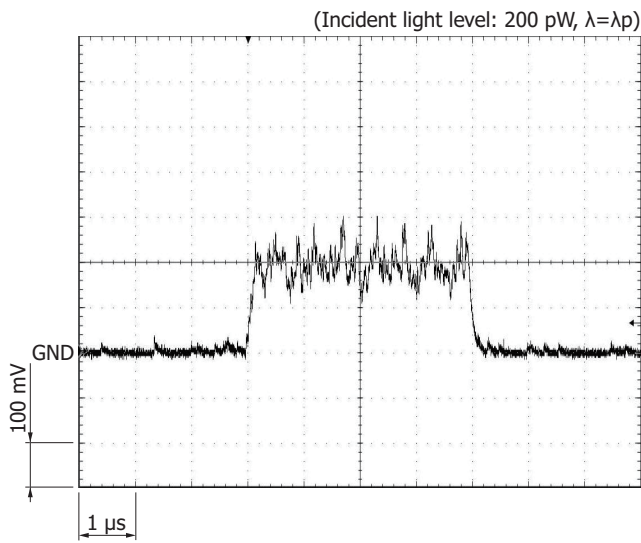


**Photoelectric conversion sensitivity vs. wavelength**

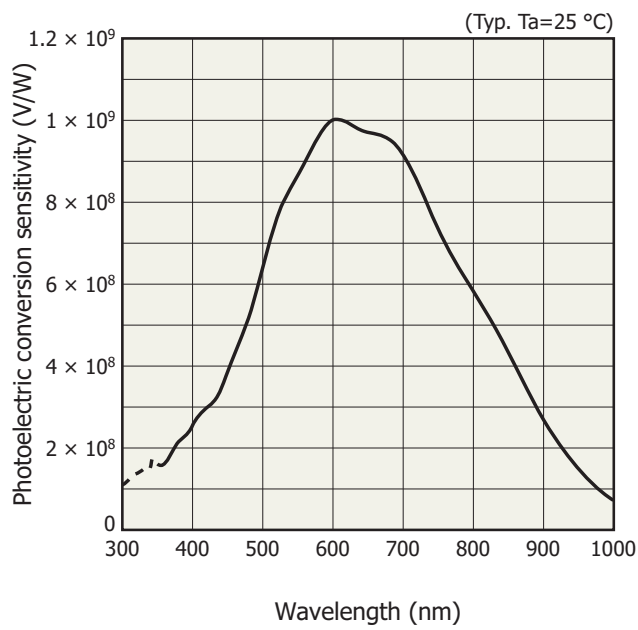


KACCB0536EA

**Frequency characteristics (typical example)**

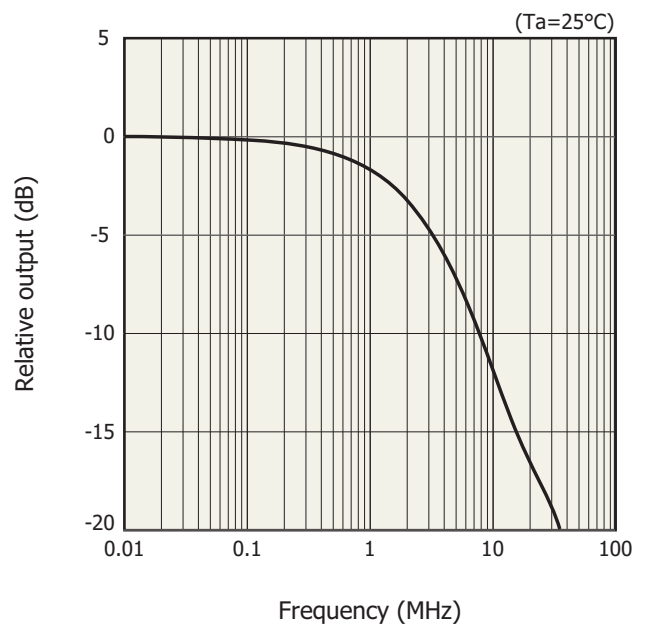


KACCB0590EA

**Linearity**

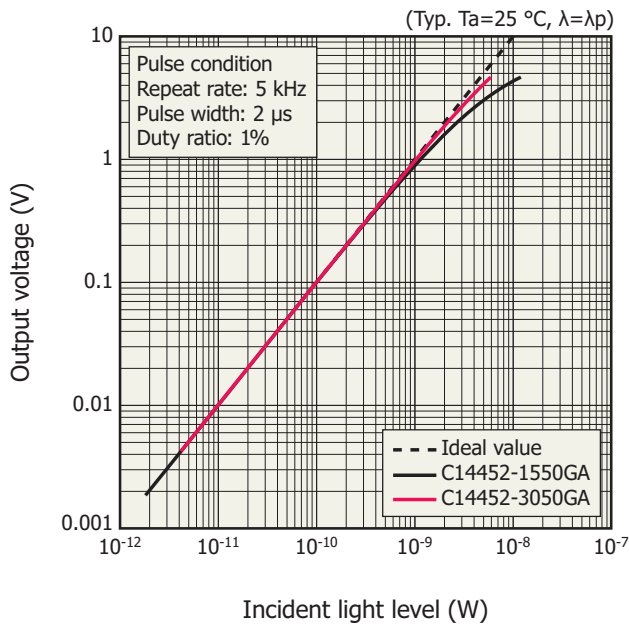

KACCB0584EA

**Dimensional outline (unit: mm)**

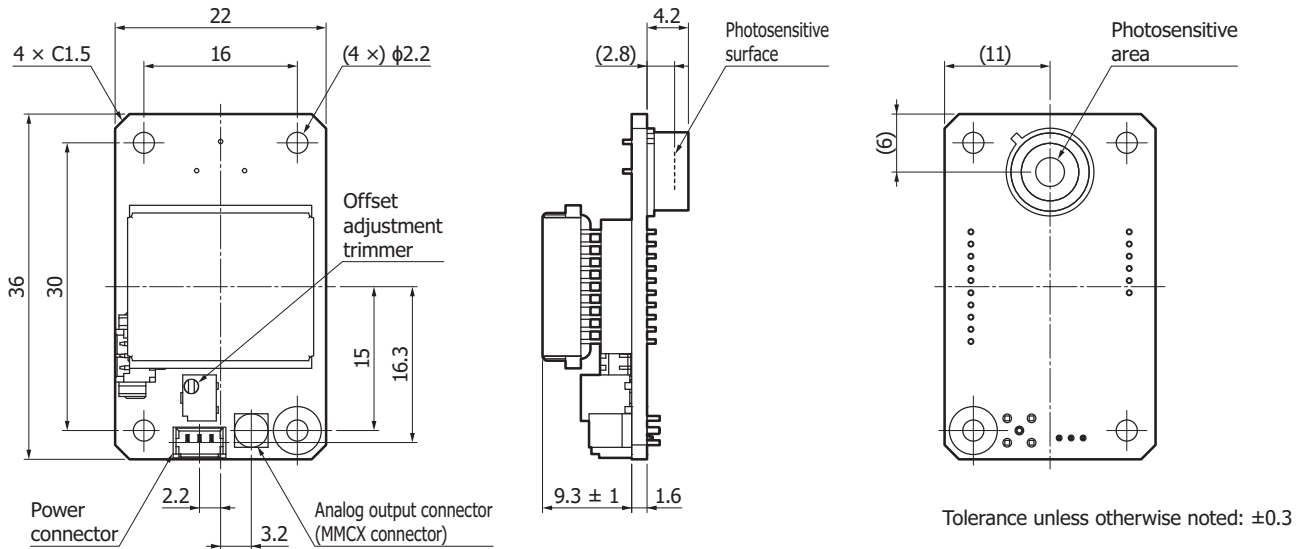

KACCA0420EA

## Accessories

- Power cable
- Instruction manual

## MPPC module lineup

Type no.	Output format	Photosensitive area (mm)	Pixel pitch (μm)	Cooling
C14455-1550GA	Analog	φ1.5	50	TE-cooled
C14455-3050GA		φ3		
C14455-1550GD	Digital	φ1.5		TE-cooled
C14455-3050GD		φ3		

## Related information

[www.hamamatsu.com/sp/ssd/doc\\_en.html](http://www.hamamatsu.com/sp/ssd/doc_en.html)

- Precautions
- Disclaimer

MPPC is a registered trademark of Hamamatsu Photonics K.K.

Information described in this material is current as of October 2019.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

# HAMAMATSU

[www.hamamatsu.com](http://www.hamamatsu.com)

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218, E-mail: [usa@hamamatsu.com](mailto:usa@hamamatsu.com)

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8, E-mail: [info@hamamatsu.de](mailto:info@hamamatsu.de)

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10, E-mail: [infos@hamamatsu.fr](mailto:infos@hamamatsu.fr)

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44)1707-294888, Fax: (44)1707-325777, E-mail: [info@hamamatsu.co.uk](mailto:info@hamamatsu.co.uk)

North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01, E-mail: [info@hamamatsu.se](mailto:info@hamamatsu.se)

Italy: Hamamatsu Photonics Italia S.r.l.: Strada della Moia, 1 int. 6, 20020 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41, E-mail: [info@hamamatsu.it](mailto:info@hamamatsu.it)

China: Hamamatsu Photonics (China) Co., Ltd.: B1201, Jianning Center, No.27 Dongsanhuan Beilu, Chaoyang District, 100020 Beijing, P.R.China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866, E-mail: [hpc@hamamatsu.com.cn](mailto:hpc@hamamatsu.com.cn)

Taiwan: Hamamatsu Photonics Taiwan Co., Ltd.: 8F-3, No. 158, Section2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (886)3-659-0080, Fax: (886)3-659-0081, E-mail: [info@hamamatsu.com.tw](mailto:info@hamamatsu.com.tw)